



Russell Hobbs




20920

 www.russellhobbs.com

Register online for an EXTRA year guarantee

Visit uk.russellhobbs.com/product-registration You must register within 28 days of purchase

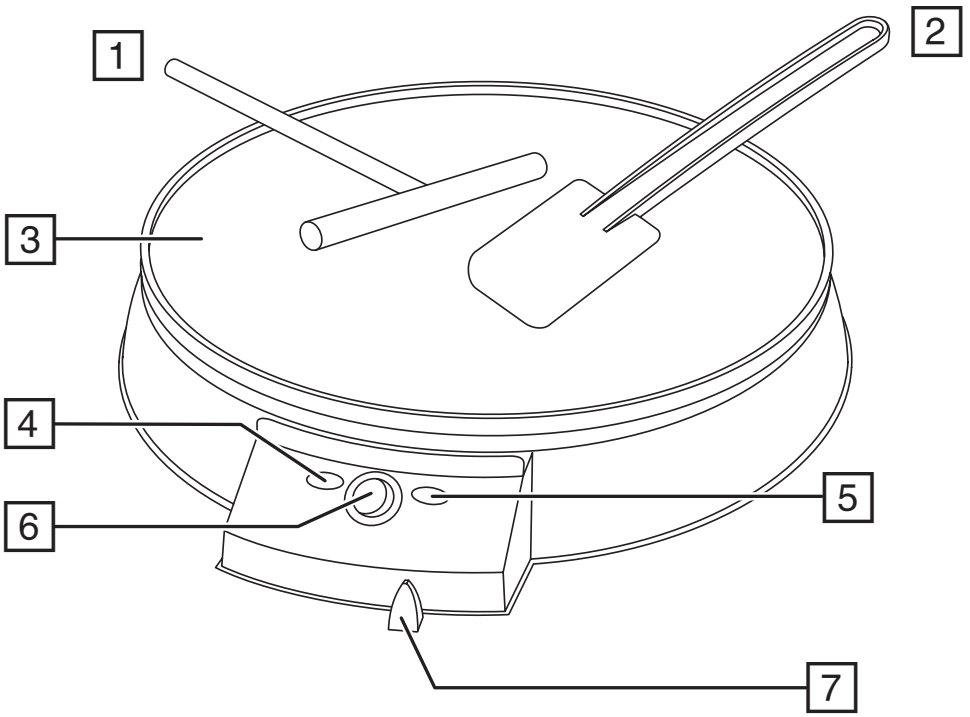


Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.

Don't connect the appliance via a timer or remote control system.

 The surfaces of the appliance will get hot.

If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.

- ⊘ Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Don't use the appliance near or below combustible materials (e.g. curtains).
- Don't use the appliance for any purpose other than making crepes.
- Don't use the appliance if it's damaged or malfunctions.

HOUSEHOLD USE ONLY

PARTS

- | | |
|----------------|------------------------|
| 1. Spreader | 5. Thermostat light |
| 2. Spatula | 6. Switch |
| 3. Grill plate | 7. Temperature control |
| 4. Power light | |

PREPARATION

- Sit the appliance on a stable, level, heat-resistant surface.
- Keep the appliance and cable away from the edges of worktops and out of reach of children.

USING

1. Put the plug into the power socket.
2. Set the temperature control to 5.
3. Move the switch to I.
4. The power light will glow as long as the appliance is connected to the electricity supply.
5. The thermostat light will come on when the appliance reaches working temperature. It will then cycle on and off as the thermostat operates to maintain the temperature. Wait till the thermostat light glows before cooking.

6. Moisten the spreader with water, to prevent sticking.
 7. Pour a small amount of batter in the centre of the grill plate.
 8. Spread it with circular movements of the spreader.
 9. Wait till the surface is no longer liquid and the crêpe can be moved slightly.
 10. Insert a spatula under a third of the crepe, and turn it over.
 11. Lift the edge to check the underside of the crepe.
 12. It should be golden, rather than brown.
 13. Move the crepe to a wire tray.
- If the crepe is too brown, reduce the temperature slightly for the next one.
 - Each batch of batter will be different.

CARE AND MAINTENANCE

1. Move the switch to **O**.
2. Unplug the appliance and let it cool.
3. Wipe all surfaces with a clean damp cloth.
4. Hand wash the spreader and spatula.

HINTS AND TIPS

- Thickness depends on egg to liquid ratio; more liquid = thin crêpes, more egg = thick crêpes.
- You can season the batter with sugar, herbs, spices, or a dash of beer.
- Adding sugar makes crêpes likely to stick together when stacked, and to tear when handled.
- Try other types of flour (wholemeal flour will produce thicker batter).

MAKES 12 CREPES

- 250 g plain flour
- 500 ml milk
- 3 medium eggs (53-63g)
- Pinch of salt

Sift the flour into a bowl. Add the salt. Stir in the eggs. Stir in the milk. Stop adding liquid when the batter reaches a creamy consistency. Rest the batter for 1-2 hours before use.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE

If you ring Customer Service, please have the Model Number to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0345 658 9700 (local rate number)

Please note: If you have purchased the product within the last 6 months, please contact the retailer in the first instance to deal with any matters relating to warranty.

GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

This warranty shall not be valid where it is contrary to U.S. and other applicable laws, or where the warranty would be prohibited under any economic sanctions, export control laws, embargos, or other restrictive trade measures enforced by the United States or other applicable jurisdictions. This includes, without limitation, any warranty claims implicating parties from, or otherwise located in, Cuba, Iran, North Korea, Syria and the Crimea region.

Guarantee period = 2 years from first retail purchase.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase. Register at:

uk.russellhobbs.com/product-registration

Consumables are guaranteed only for their recommended lifecycle. Replacement/Spare parts* are excluded and are only covered by a 1 year warranty.

* Examples include filters, removable grill plates, drip trays/crumb trays etc.

ONLINE

www.russellhobbs.com for more products